

READ THESE INSTRUCTIONS THOROUGHLY BEFORE

INSTALLATION KEEP THESE INSTRUCTIONS FOR

FUTURE REFERENCE.

IMPORTANT:

This product must be installed by a qualified electrician or

competent person, and in

accordance with current building

and IET wiring regulations.

BOX CONTENTS

packed to avoid damage during

installation carefully inspect the

luminaire to confirm there is no damage. DO NOT INSTALL if any damage has occurred to the fixture

Foremark Plus High Bay Plug & Play (Zhaga)


















INSTALLATION INSTRUCTIONS

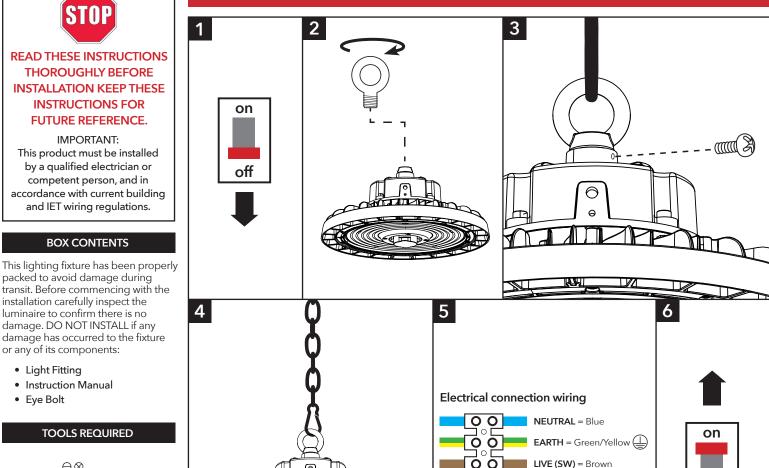

PLEASE READ THESE INSTRUCTIONS BEFORE INSTALLATION.



WARNING: Risk of electric shock! Isolate the mains power before proceeding.

- Turn off the mains power before performing inspections, installation, or removal
- Verify that the supply voltage is correct by comparing it with the luminaire label information
- It is the installers responsibility to ensure installation is suitable for the total load of the luminaire(s). The supply cable, fuses/circuit brakers must be correctly rated for the electrical load and considering for any transient inrush currents that may occur
- Do not perform insulation strength or resistance tests on installed luminarie(s) connected
- 1. Isolate the circuit.
- 2. Attach the eye bolt to the top of the fitting by screwing the thread into the top hole.
- 3. Secure the eye bolt using a PH screwdriver.
- 4. Hang the light fitting using a suitable strengthened suspension cord or chain. Recommend a suitable strength carabiner clip for ease. (See Weights overleaf).
- 5. Connect the cable to the mains as per image 5. Installation must be performed by a qualified electrician. (Terminal block not included)
- 6. Power on.

For emergency information, see overleaf.

or any of its components: Light Fitting

- Instruction Manual
- Eye Bolt

TOOLS REQUIRED




Screwdriver



Cable



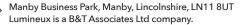



DISPOSAL

The light source of this unit is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced.

Disassembly instructions for end of life disposal available on website.

Disposal of Electronic Equipment WEEE Directive 2002/96/EC This product falls within the scope of the Waste Electrical & Electronic Equipment Directive (WEEE), which means the product should not be disposed of as normal household waste. Please recycle where facilities exist or check with your Local Authority. RoHS - All components and materials used in this product are RoHS 2002/95/EC compliant.

Specifications may change from time to time. The information contained in this leaflet is for guidance only and should not be considered as always accurate and should be treated as not representative.

WARRANTY

This luminaire is warranted for a period of 5 years from the date of purchase.** The backup battery pack in the emergency version is warranted for a period of 24 months. The warranty could be invalidated should the light fitting not be installed according to these instructions, outside the scope of the specification or the product has been altered or tampered with in any way. Please see website for terms and conditions.


PRODUCT TEMP SPECIFICATION

Standard -20° to +45°C Emergency 0 to +30°C

Foremark Plus High Bay Plug & Play (Zhaga)



FOREMARK PLUS DIMENSIONS								
Part No.	Description	Watts	L (mm)	W (mm)	H (mm)	Weight		
430560-90	Foremark Plus High Bay	80W	276	276	168	2.1Kg		
430561-90	Foremark Plus High Bay	120W	276	276	168	2.1Kg		
430562-90	Foremark Plus High Bay	150W	276	276	168	2.1Kg		
430560-120	Foremark Plus High Bay	80W	276	276	168	2.1Kg		
430561-120	Foremark Plus High Bay	120W	276	276	168	2.1Kg		
430562-120	Foremark Plus High Bay	150W	276	276	168	2.1Kg		

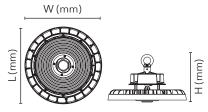

Installation Engineers Contact De	Luminaire Reference / Location			
Name:	Tel:			

 Luminaire Details:
 Full Recharge Duration 24 Hours
 Emergency Duration 3 Hours
 Lamp Type LED

ROUTINE TEST RECORD										
Type Test	Year	1	Year 2		Year 3		Year 4		Year 5	
	Signed	Date								
Functional 1										
Functional 2										
Functional 3										
Functional 4										
Functional 5										
Functional 6										
Functional 7										
Functional 8										
Functional 9										
Functional 10										
Functional 11										
3hr Duration 12										

Wiring instructions for units equipped an with EMERGENCY function


Emergency lighting luminaries must be installed and maintained in accordance with the emergency lighting standard BS 5266-1

- 1. Connect incoming earth cable to 'Earth' terminal on connector block.
- 2. Connect incoming neutral cable to 'Neutral' terminal on connector block.
- 3. For the emergency unit to work correctly, please ensure that an uninterrupted permanent live feed is present and is connected directly to the 'Permanent Live' terminal of the mains terminal block. Please ensure there are no switches, PIRs etc within the permanent live feed, constant switching of the emergency pack could result in premature battery failure.
- 4. Connect incoming switched live cable to the terminal marked "Switched Live"

NOTE: If there is no switch live feed and the unit has a microwave sensor, simply bridge across from the "Permanent Live" to the Switch Live" on the mains terminal block.

- 5. There should be a loose flying lead connected to the battery. This needs to be attached to the flying lead from the emergency control unit.
- Following power up the green LED indicator should illuminate to indicate charging. If power to the unit is disrupted or isolated, the unit indicating green LED will switch off, triggering the emergency LEDs to illuminate.
- 7. Please allow 24 hours charge before first emergency test.

EMERGENCY FITTINGS ONLY. EARTH CONNECTION REQUIRED.

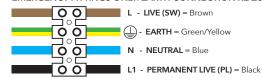

Self-Test EMERGENCY function

The self-test version of emergency is fitted with control gear that will carry out periodic functional tests every 1 month and full duration test every 12 months.

Fault/Test/Status	Reason			
Battery fully charged and operational	Standard daily use			
Battery Charging	Initial charge / battery topping up			
Battery Failure	Battery is disconnected or damaged/faulty			
Duration Test Failure	Maintenance check required by qualified engineer			
Automatic Testing - Function 5 minute test (Every 30 days)	Self-testing in operation			
Automatic Testing - Duration test is 3 hours (every 12 months)	Self-testing in operation			
	Battery fully charged and operational Battery Charging Battery Failure Duration Test Failure Automatic Testing - Function 5 minute test (Every 30 days) Automatic Testing - Duration test is 3 hours			

This product contains a light source of energy efficiency Class B.

** Please see our website for more detailed information on warranty.

Technical Helpline: +44 (0)1507 328031